

Operation Instruction

M-204T Microwave Sensor

Make your choice.....

Safety Instruction

Related part should be operated under low voltage condition. All installation process and maintainance should be carried out by the supplier

Name of related parts

The indicator will shin for few seconds when starting When object is detected by sensor indicator lights up. Sensitivity potentiometer JST connector Brown yellow: Relay Rotation left and right Power cable

3 Installation


- 1 Please do the installation in the proper position Installation height within 3.5m. Please arrange hole)mm.* ϕ (on the installation module. And hole (ϕ 12m) for insetting guide line. Remove the burrs during digglng the wire hole, Open the installation board after the hole process.
- 2. Please connect the signal cable with the terminal of automatic door.

Brown and Yellow cable: Signal output COM/NO Green and White cable: AC/DC12V-24V

- 3. Take the outer cover off, and fix the screws.
- 4. Finish the cable connection and get on power.
- 5. Please set the detection range and disjunctor accordingly
- 6.Cover With The Lid

Adjustment(Get on power)

1. Detection range as below shown

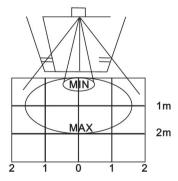

NOTE: Please stand out of the detection range around 5S to ensure the sensor has enough time to finish the self-adjustment.

2. Sensitivity Adjustment



Detection Range


MIN:0.5*0.4M MAX:3.5*2M

Select different detection range by adjusting sensitivity knob

3. Adjustment of detection direction

(Adjust Direction of front and back/Left and Right flexibly)

Adjusting angle of Plain aerial to get different detection distance and range 15×2range

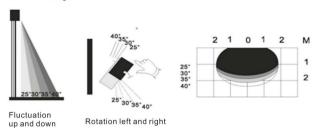

NOTE:

Initial setting is 45degree by factory.

All the parameters above are only for reference, detection height is 2.2M.

Detection range will be different because of the making material of door and ground, please adjust the sensitivity by the knob mentioned above

When it is adjusted to 60 degree, the detection range is the widest, door will keep on closed and open all the time

5 Special Note











Position should be Do not place into Moving object should fluorescent should fixed tightly to avoid board or other material. be avoided.

6 Failure cause

Symptom	Cause	Method
Door&Indicator lose failure	Did not get on power	Check cable connection & power supply
Door keep on closed and open	Sensor detected the movement of autodoor;vibration of movement	1.adjust angle 2.check the position 3.adjust sensitivity
Door do not close Red indicator lose failure	Switch of autodoor controller lose failure incorrect position Incorrect output of sensor	Check the switch of autodoor controller &setting of ouput.
Door keeps on moving when it rains	Sensor detected the actions of rain	Adopt waterproof accessories

7 Parameter

Size: $120mm(W) \times 80mm(H) \times 50mm(D)$

Technology:Microwaveµwa	ve disposer Frequency:24.125GHz	
Transmitting power: 20dBm EIR	Launch frequency density: 5mW/cm2	
Installation Height:3M(MAX)	Installation Angle:0-90 degree(lengthways) -30 to +30(lateral)	
Detection Mode:Motion	Min detection speed:5cm/s	
Power: 2W(VA)	Detection range:8m*4m(Installation Height 2.2M)	
Maximum voltage:42AC-60V DC	Maximum Current:1A	
Maximum switching power:30W(E	C)/60VA(AC) Retention time:0.5S	
Guide line:2.5M	Working temperature:-20 ℃ to+55 ℃	
Protection class:IP54	Sheating material: ABS plastic	
Color: silvery		
Anti-interference performance:R&TTE 1995/5/EC,EMC 89/366/EEC		
Power Voltage: 12V to 30V AC+/-10% (50Hz to 60Hz); 12V to 36V DC		